

# OAV ® Air Bearings

## How much air pressure do I use?

It is best to start with 40 PSI and gradually increase until desired results are achieved. Our standard air bearings are designed to function between 40PSI and 100 PSI

Unique solution ID: #1016

Author: oav air bearings

Last update: 2015-03-20 17:43